

Ruched Top Pleated Panel contains:

- Instructions to make a pleated panel with an integrated ruched top.
- Choice of pleat styles: inverted pleats or cartridge pleats.
- Instructions included for single width panels may be modified for multiple widths.

Suggested Fabrics: Fabrics which will “hold” the ruching work best. Examples of these fabrics are silks, linens, or other natural fibers. Heavy or thick fabrics, such as upholstery fabrics, are not suitable.

Yardages for one (1) panel:



Solid Fabrics: Face fabric: Finished panel length plus 32 inches.
Lining: Finished panel length plus 6 inches.
Interlining: Finished panel length plus 9 inches. (Optional)

Print Fabrics: Face fabric: Finished panel length plus 32 inches, plus repeat.
Lining: Finished panel length plus 6 inches.
Interlining: Finished panel length plus 9 inches. (Optional)

Supplies: 4 inch buckram for header and hem ironing guide, drapery pins, drapery weights for corners and seams, thread, low tack blue painters tape. A t-square and drapery table or other large flat table for assembling panels is highly recommended.

Difficulty Level: Intermediate

Pattern Cover: Ruched Cartridge Pleat is shown in photograph.

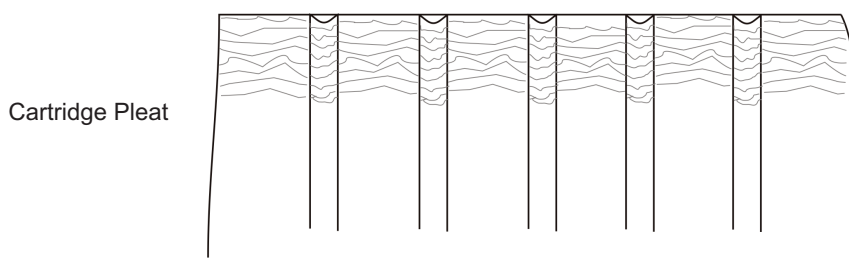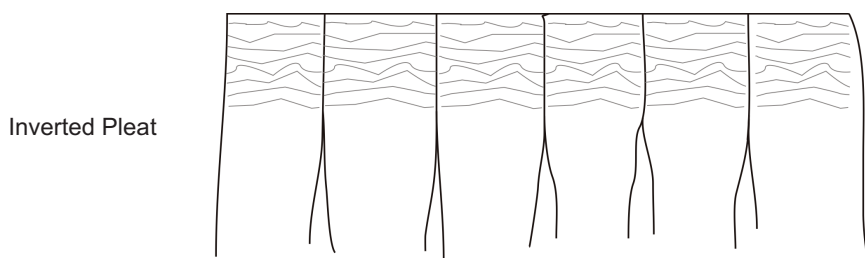

Ruched Top Pleated Panel

Pattern 3001